



SEATTLE
makers

Tool: Belt Sander

Model: Black and Decker
DS321

Location: Woodshop

Safety Instructions for All Tools

Wear proper apparel

- Always wear eye, ear and respiratory protection. Do not wear loose clothing, gloves, neckties, rings, bracelets or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.

Keep work area clean and check for damaged parts

- Cluttered areas and damaged tools invite accidents.

If you have a question, ASK FOR HELP!

Safety instructions: Belt Sander

Purpose of the tool

- When fitted with different sandpaper grits, the belt sander can quickly remove paint or finish from wood. Additionally, the belt sander can efficiently sand wood at a rapid speed.

Setting up the tool

- Prior to setting up the belt sander, ensure that it is disconnected from the power supply.
- Check that you are using the proper sandpaper grit for your purpose.
- Ensure that the sandpaper is properly aligned on the belt.
- Connect the belt sander to the power supply.

Operating the tool

- Place the belt sander against the material you are working on.
- Squeeze the trigger and move the belt sander around your material.

Storing the tool

- Disconnect the belt sander from the power supply.
- Clean off any debris or saw dust left on the belt sander.
- Replace the belt sander and sandpaper in their storage locations.