



SEATTLE
makers

Tool: Multi-Tacker

Model: Dewalt

Location: Woodshop

Safety Instructions for All Tools

Wear proper apparel

- Always wear eye, ear and respiratory protection. Do not wear loose clothing, gloves, neckties, rings, bracelets or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.

Keep work area clean and check for damaged parts

- Cluttered areas and damaged tools invite accidents.

If you have a question, ASK FOR HELP!

Safety instructions: Multi-Tacker

Purpose of the Tool

- A multi-tacker combines the function of a staple gun and a brad nail gun. The multi-tacker accepts a variety of flat crown, staples and headless brad nails.

Setting up the Tool

- Prior to using the multi-tacker, ensure that it is disconnected from the power supply.
- Select the proper staple or nail depending on your material.
- Clamp your material to your work surface so that the material does not move around.
- Connect the multi-tacker to the power supply.

Operating the Tool

- Gently place the multi-tacker against your material in the desired location where you want to place the staple or nail.
- Squeeze the trigger until the staple or nail is fired into the material.
- Remove the multi-tacker from the material and place it against the next location where you want to place a staple or nail.
- When finished, remove the multi-tacker from the material and turn it off.

Storing the tool

- Disconnect the multi-tacker from the power supply.
- Clean off any debris or sawdust left on the multi-tacker.
- Remove any leftover staples or nails from inside the multi-tacker and return them to their storage location.
- Replace the multi-tacker in its storage location.