



SEATTLE
makers

Tool: Router

Model: Black and Decker
7604

Location: Woodshop

Safety Instructions for All Tools

Wear proper apparel

- Always wear eye, ear and respiratory protection. Do not wear loose clothing, gloves, neckties, rings, bracelets or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.

Keep work area clean and check for damaged parts

- Cluttered areas and damaged tools invite accidents.

If you have a question, ASK FOR HELP!

Safety instructions: Router

Purpose of the tool

- Typically used for shaping wood, a router uses various bit shapes to cut, trim or shape a material.

Setting up the tool

- Prior to using the router, ensure that it is disconnected from the power supply.
- Check that you are using the proper router bit for the material and task.
- Ensure that your material is resting on a stable work surface and clamped into place.
- If using a plunge router, set the depth of cut.
- Connect the router to the power supply.

Operating the tool

- Place the router on your material without the bit touching the material.
- Ensure that the router bit will not come into contact with the electrical cord or other items besides the material you want to cut.
- Turn on the power switch and hold in place until the router reaches maximum speed and begin your cut.
- Do not force the router through the material or else the saw or your material may break, causing injury.
- Turn the power switch off when you have finished your cut. Remove the router from the material when the bit has completely stopped.

Storing the tool

- Disconnect the router from the power supply.
- Clean off any debris or saw dust left on the router.
- Replace the router and bit in their storage locations.